

Touch Back Control with QuattroPod User Manual V 1.0



Content

Introduction	2
1. Using Touch Back with Touch Screen Display	3
1.1. Pairing QuattroPod Transmitter with QuattroPod Receiver	3
1.2. Connecting Touch Screen Display to QuattroPod Receiver	3
1.3. Connecting QuattroPod Transmitter to Laptop	4
1.4. Start Enjoying Touch Back	4
2. Using Touch Back with Mouse	5
2.1. Pairing QuattroPod Transmitter with QuattroPod Receiver	5
2.2. Connecting Wireless Mouse Receiver Display to QuattroPod Receiver	5
2.3. Connecting QuattroPod Transmitter to Laptop	6
2.4. Start Enjoying Touch Back	6

Introduction



With Touch Back function, presenters can control the application installed on their MAC or Windows laptop remotely via touch screen display or wireless mouse.

By leveraging Touch Back function of QuattroPod, enterprise user can greatly enhance productivity and

transparent communication.

* Please be advised that Touch Back function only supports Windows and macOS platforms. If you have any issues regarding the device compatibility, please contact [Support Center](#).

1. Using Touch Back with Touch Screen Display


For Touch Back function on touch screen display, please follow the below instructions.

1.1. Pairing QuattroPod Transmitter with QuattroPod

Receiver

Connect QuattroPod transmitter with QuattroPod receiver via USB port. Once plugged in, the message "Pairing..." will pop out. Within 1min, the pairing will be done and display "Pairing OK" message on the landing page.

Please make sure QuattroPod transmitter has been switch to "PC" mode.

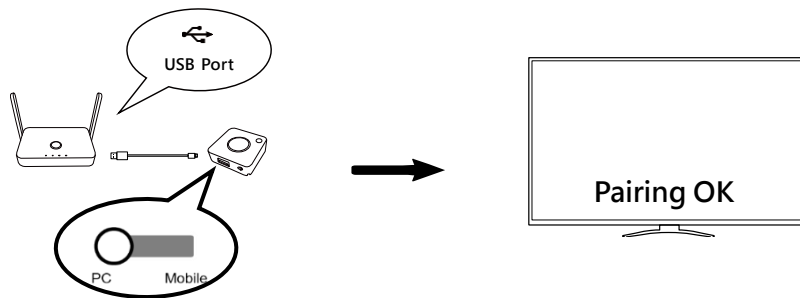


1.2. Connecting Touch Screen Display to QuattroPod

Receiver

Connect the QuattroPod receiver with touch screen display via HDMI and USB Port. **Make sure HDMI and USB that connected to the touch screen display are at the same rail.**


Please be advised that the touch screen should be provided with sufficient power, otherwise may cause the touch screen to cease working.

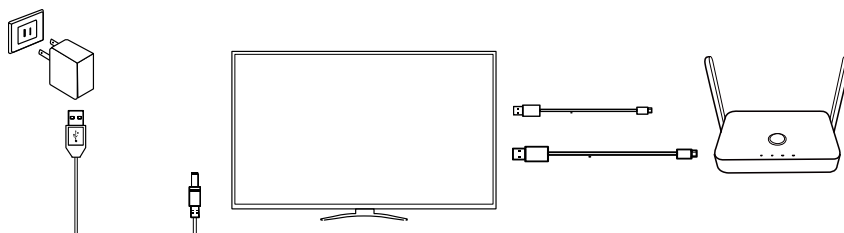

1.3. Connecting QuattroPod Transmitter to Laptop


Connect QuattroPod transmitter to laptop via HDMI/Mini DP and USB port.

We strongly suggest connecting the laptop to an external power supply, in case the laptop being switched to power saving/ eco mode.

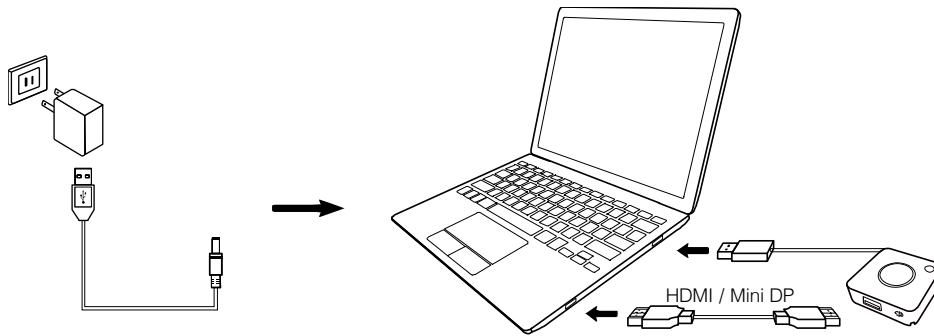

1.4. Start Enjoying Touch Back

Once complete all the above steps, simply click the main button on top of QuattroPod transmitter. Then you could start controlling your application remotely with touch screen display.

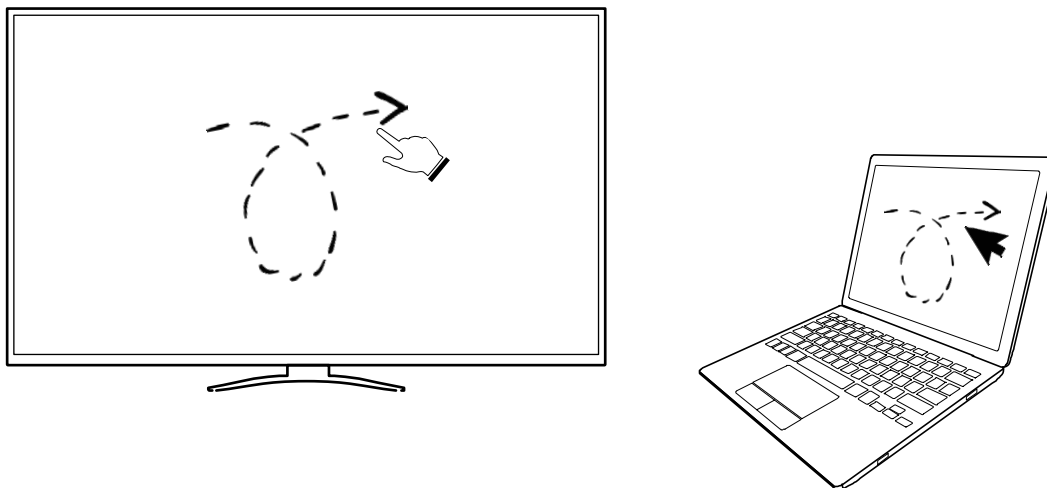

2. Using Touch Back with Mouse


For Touch Back function with the mouse, please follow the below instructions.

2.1. Pairing QuattroPod Transmitter with QuattroPod

Receiver

Connect QuattroPod transmitter with QuattroPod receiver via USB port. Once plugged in, the message "Pairing..." will pop out. Within 1min, the pairing will be done and display "Pairing OK" message on the landing page.

Please make sure QuattroPod transmitter has been switch to "PC" mode.

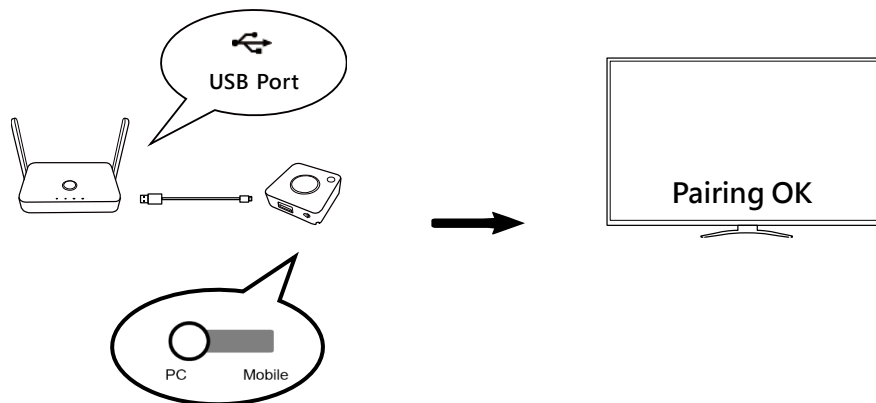

2.2. Connecting Wireless Mouse Receiver Display to QuattroPod Receiver


Connect wireless mouse receiver with QuattroPod USB Port.



2.3. Connecting QuattroPod Transmitter to Laptop

Connect QuattroPod transmitter to laptop via HDMI/Mini DP and USB port.

We strongly suggest connecting the laptop to an external power supply, in case the laptop being switched to power saving/ eco mode.

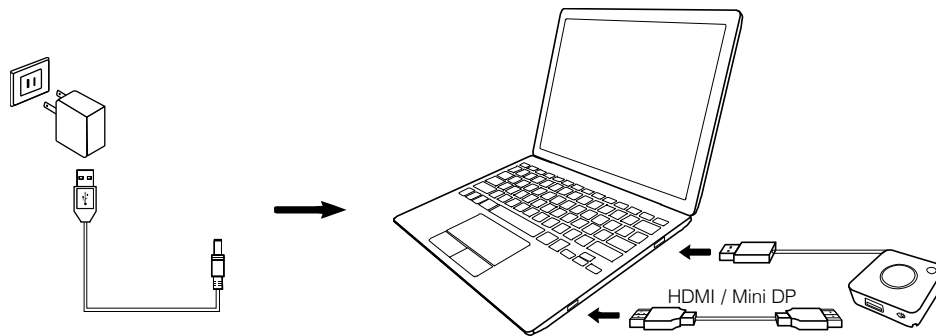

2.4. Start Enjoying Touch Back

Once complete all the above steps, simply click the main button on top of QuattroPod transmitter. A message “Hid Driver loading” would pop out.

After that, you could start controlling your application remotely with a wireless mouse.

